

Installation instructions AWRON BMW F80-F82-F87 flap control



M2 F87

M3 F80

M4 F82



Necessary tools


Socket wrench TORX T25



Socket wrench 10mm



Flat screwdriver 2mm

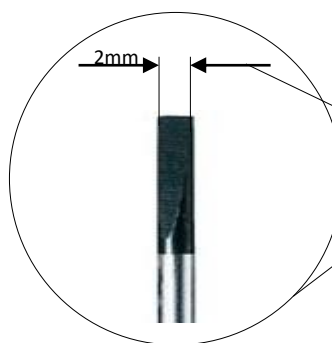

Assembly tools

Disconnect the negative pole of the battery



Hexagon, wrench size 10mm

Disassembly of the cover under the glove compartment



Hexagon, wrench size 8mm



Hexagon, wrench size 8mm

Disassembly of the cover under the glove compartment




No tools necessary



No tools necessary

Disassembly of the cover under the glove compartment

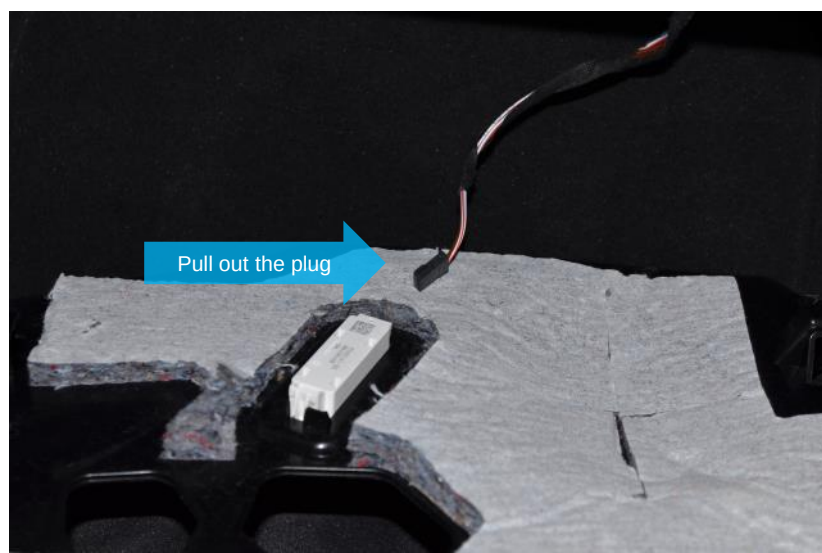

No tools necessary

Disassembly of the cover under the glove compartment



Use a plastic wedge




Use a plastic wedge

Disassembly of the side panel on the passenger side




Use a plastic wedge

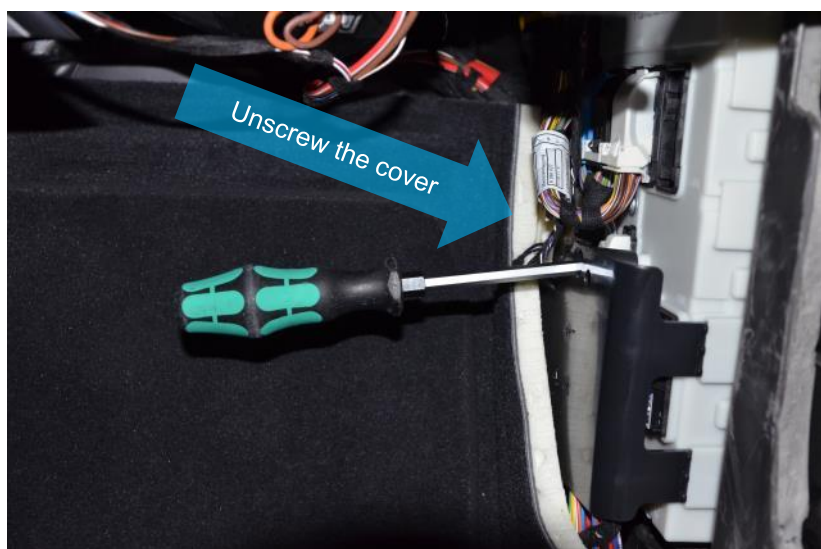


Torx T25

Exposure of the plug on the FEM control unit

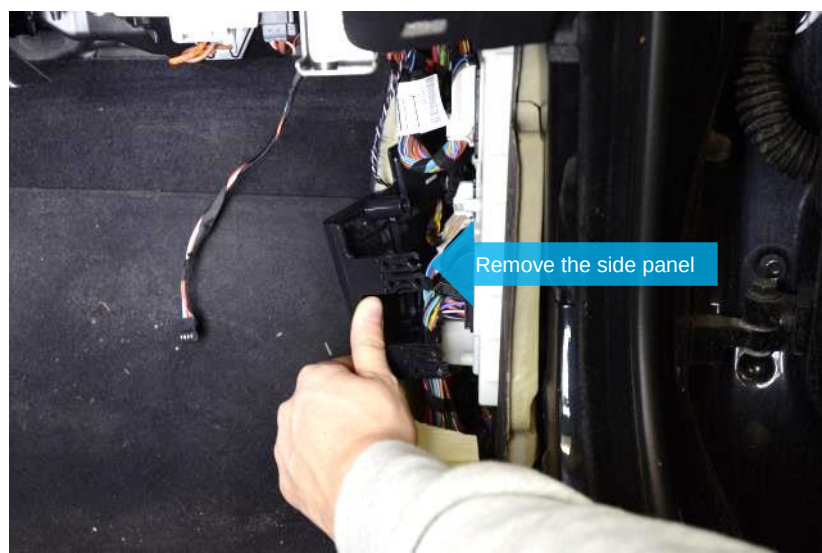


No tools necessary

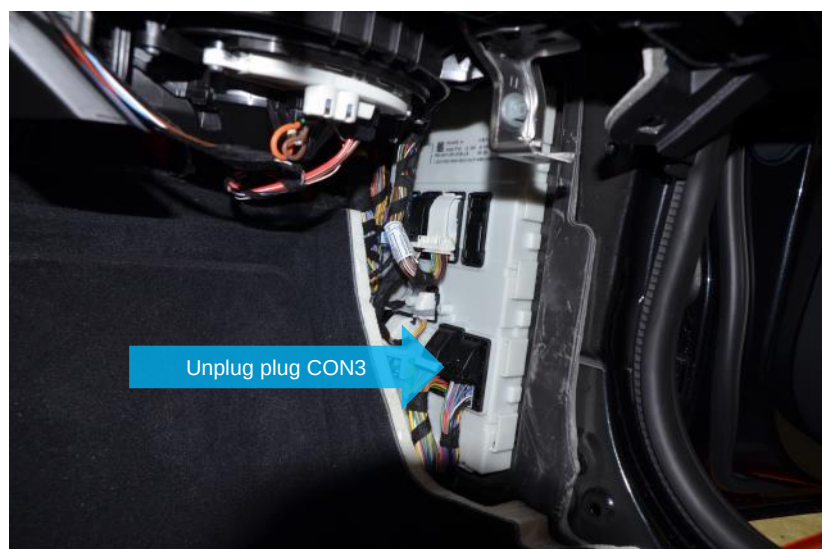


No tools necessary

Dismantle plug CON 3

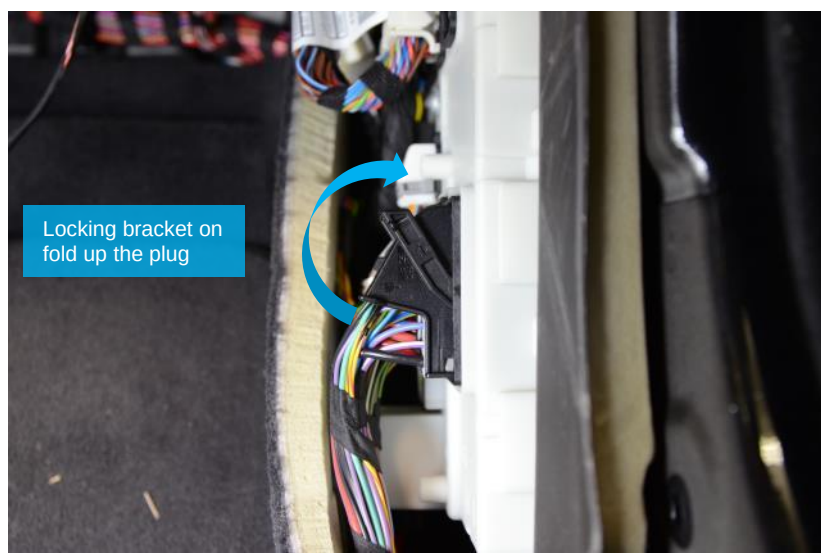


No tools necessary

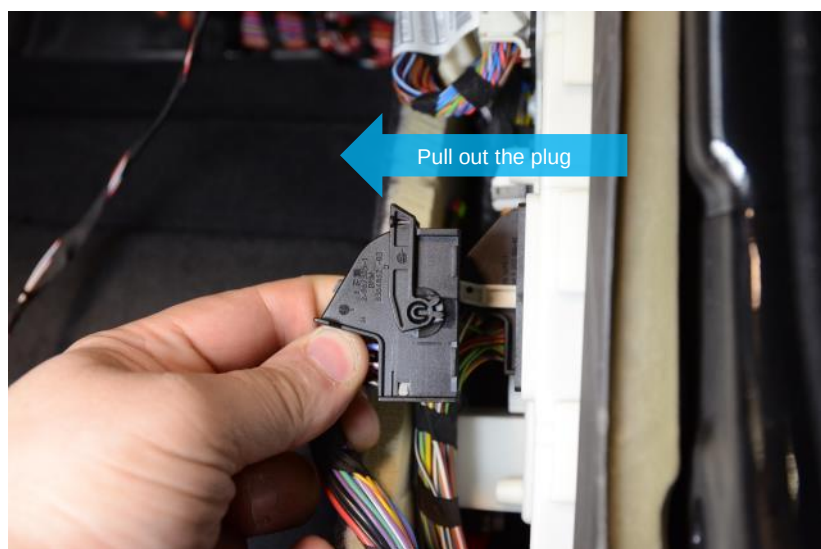


No tools necessary


FEM/BDC CON 3

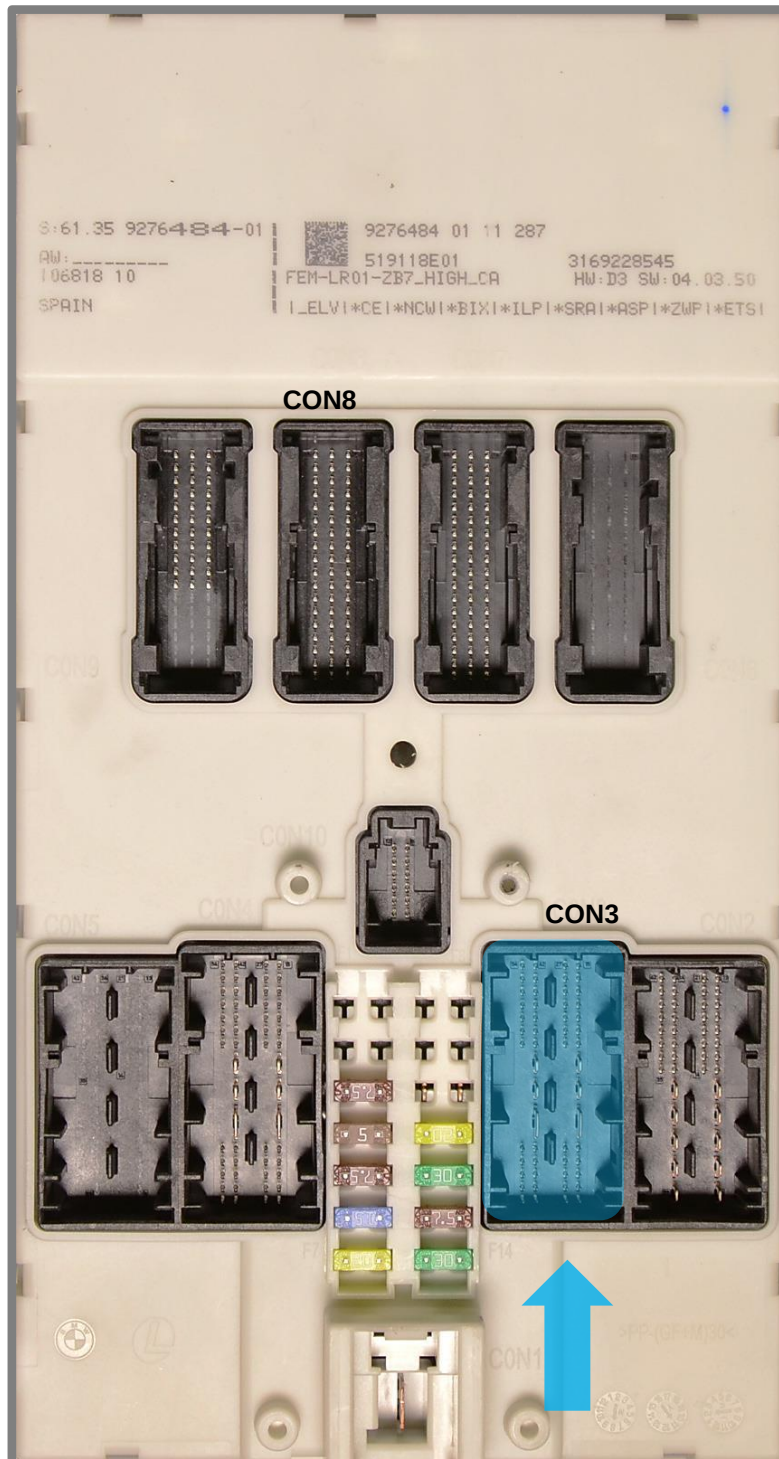

Unpin the cable from the chamber

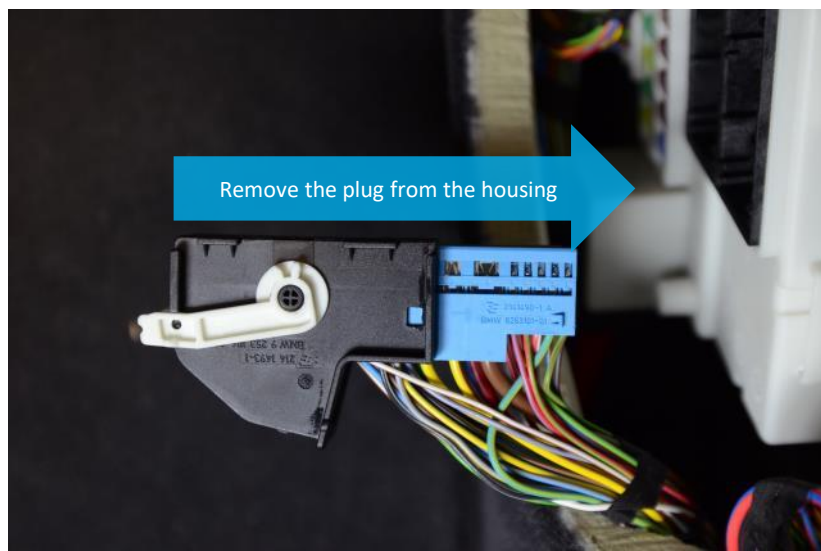


No tools necessary

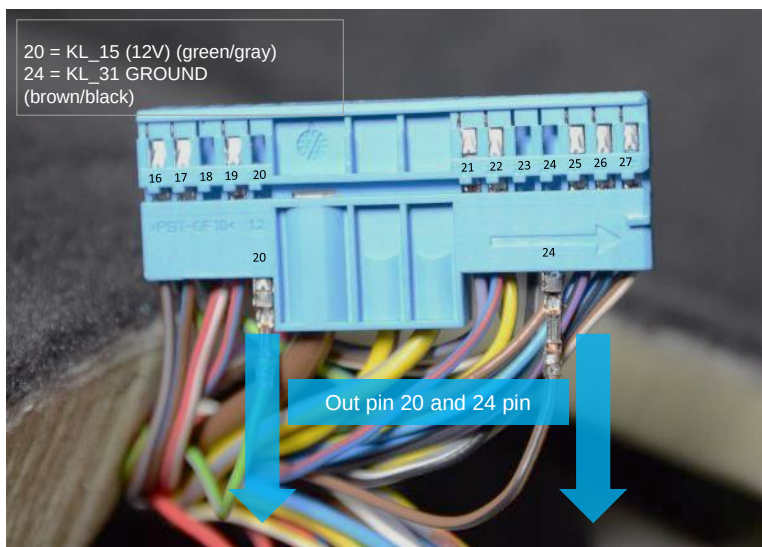


Flat screwdriver 2mm

Pin the cable in the plug and put it together

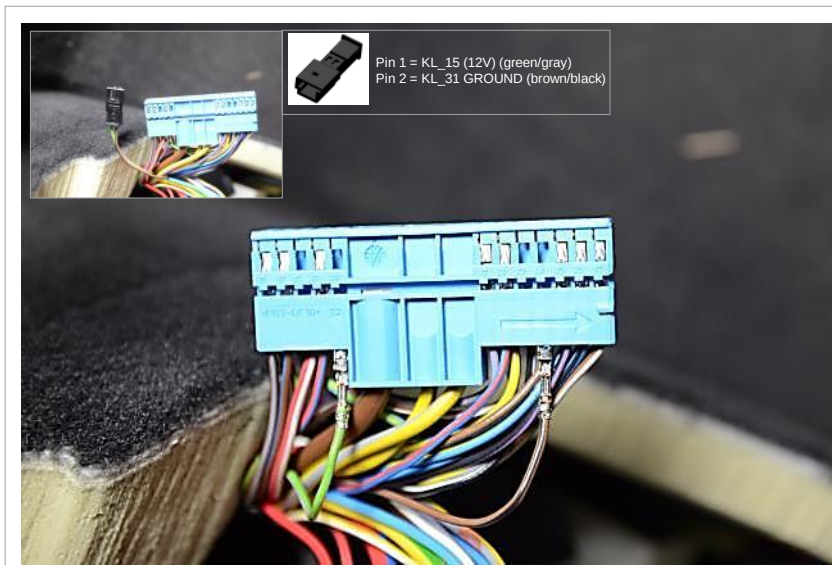


No tools necessary

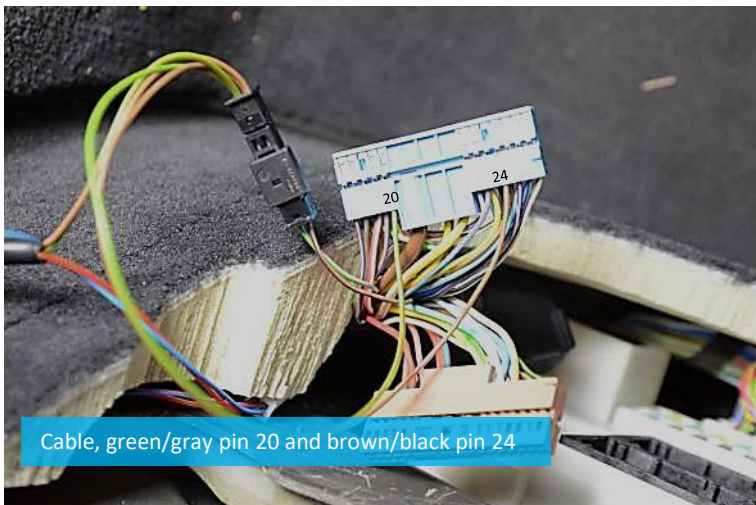


No tools necessary


FEM/BDC CON 8

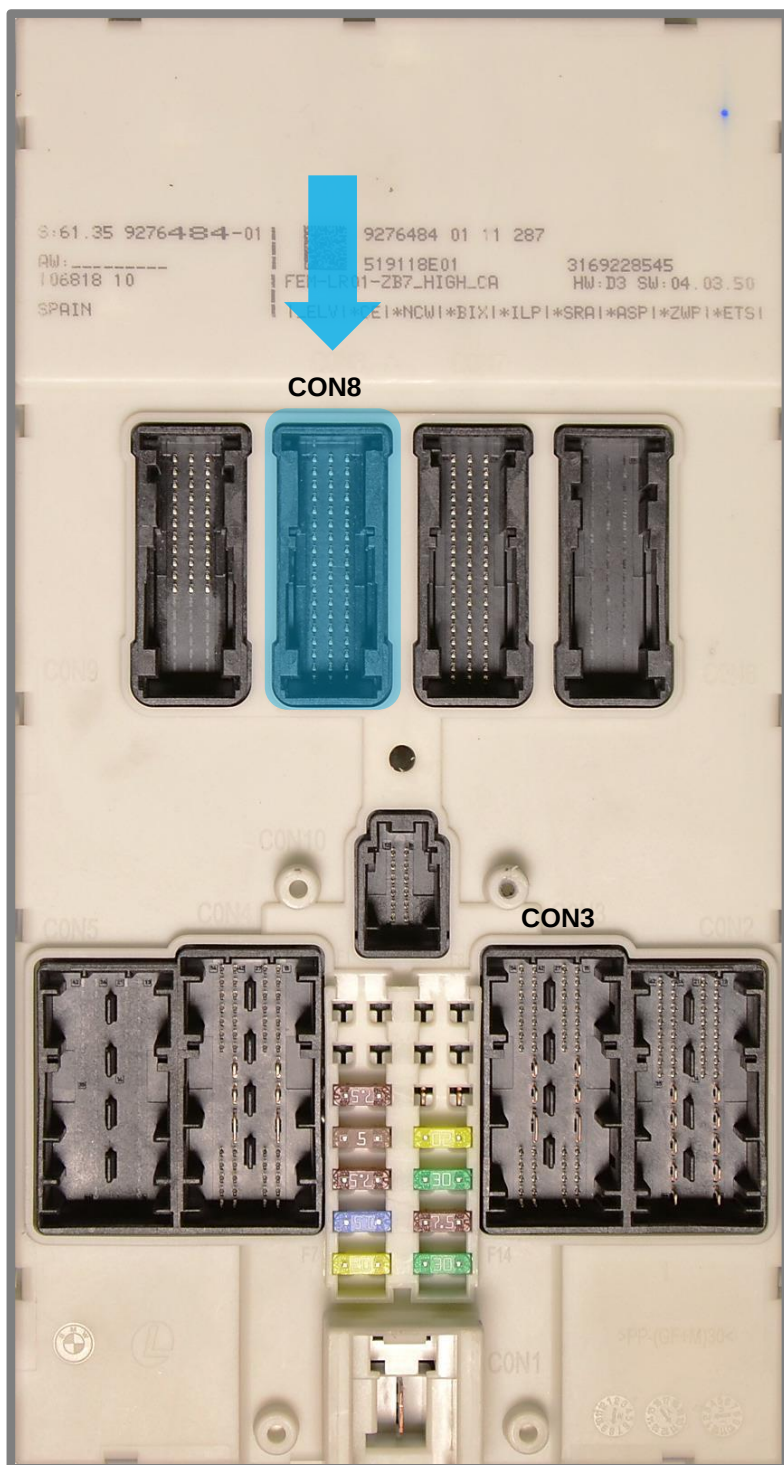

Dismantle plug CON 8

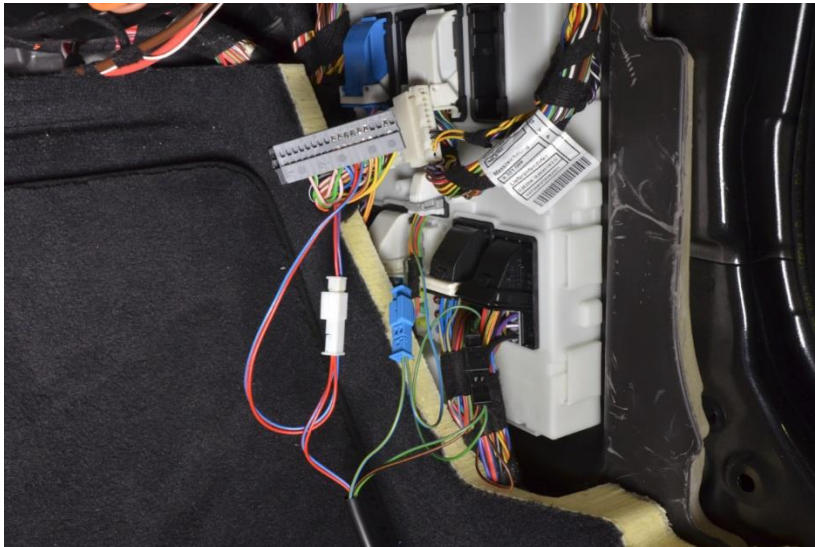

No tools necessary

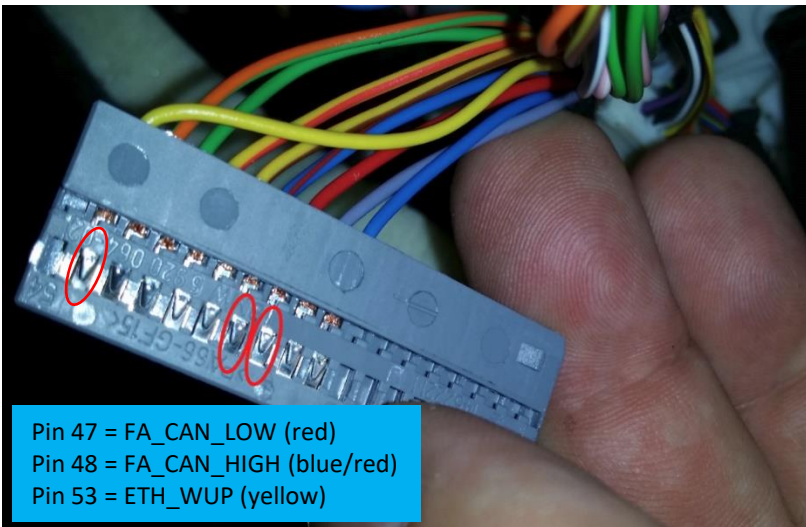

Flat screwdriver 2mm

Scope

- Exhaust flap module
- Cable harness
- 3 x 2 pol. socket housing



Contact



AWRON-automotive
Inh. Robert Sop
Herbergstrasse 21
80995 München
Germany

Tel. +49 (0)89 37911860

E-Mail: info@awron-automotive.de

Webseite: www.awron-automotive.de